

1. ACCESSING THE CLEANING MENU

A. FINDING MENU



- 1. Gently double tap the bottom right of screen
- 2. Select the home icon when it displays
- 3. Select the care options tab



B. CLEANING OPTIONS

	Care	
Cleaning programs	Selection of different cleaning programs	
CleanLock	Touch display switch-off for display cleaning	
Instructions	Cleaning animations	
CLEANING PROGRAMS	CLEANLOCK	INSTRUCTIONS

Different cleaning options

- 1. System cleaning
- 2. Mixer rinsing
- 3. Milk system rinsing
- 4. Foamer rinsing

A 15-second countdown starts and the screen is deactivated. The touch display can now be cleaned by wiping action.

Animated instructions for the weekly cleaning procedures, includes choc mixer and combi spout.

2. END OF DAY **CLEANING PROCESS**

SYSTEM CLEANING

End Of Day Cleaning Process. This needs to be performed daily. NOTE: WMF blue cleaning container is required for cleaning. **PROCESS**

- Access the Care menu 1.
- Touch Cleaning programs 2.
- Touch System cleaning 3.
- 4. Follow prompts to setup - Information / instructions will be shown on the display
- 5. Machine will perform clean cycle -Up to 14 mins
- Pack away the cleaning containers 6



CAFIZA TABLET INSERTED FOR BREWER



RINZA TABLET INSERTED FOR MILK SYSTEM. DO NOT ADD WATER.

3. CLEANING INTERVALS **OVERVIEW**





For further information please refer to care menu instructions or user manual

Cleaning instructions WMF 8000S Active Milk

Please refer to the User Manual.

Follow the overview of the cleaning interval schedule in the Care chapter in the User Manual. Prior to the first cleaning, read the User Manual, Care chapter.



Cleaning agent

For daily cleaning: 1 special cleaning tablet for WMF milk system *Always use the cleaning container for cleaning. Do not add water.*



Mik system cleaning



program.

Manual combi spout cleaning Switch off using the ON/OFF button prior to cleaning. Unplug mains plug.

The machine is now ready

for use.

Α В - Dismantle combi spout in 3 parts - Open front panel. - Mix 5 ml of WMF special cleaning agent with or dissolve a - Carefully release mixer hose from the mixer bowl. special cleaning tablet for WMF milk system in 0,5 I - Pull forward the green marked lever next to the combi lukewarm water. spout. - Place mixer hose in cleaning solution* - Carefully disconnect milk hose from combi spout. - Place all three parts of the combi spout in cleaning solution. - Push the green marked clip at the spout and remove All parts must be completely immersed in the cleaning combi spout. solution. - Release mixer hose from combi spout*. - After 5 hours, clean all parts thoroughly with a brush - Rinse all parts of combi spout und mixer hose* very thoroughly with clear water and reassemble. **C*** D

- Turn the green stud on the bayonet connector underneath the mixer bowl counter-clockwise to open. Mixer bowl is released from the retaining catch. The propeller for the mixer is now visible.

- Clean the propeller with a cloth.
- Dismantle two-piece mixer bowl.
- Clean both parts of mixer bowl and mixer hose under warm running drinking water.
 - Allow all parts to dry completely.

- Reassemble and replace combi spout.
- Lock with the green marked lever next to the combi spout.
- Connect mixer hose* onto combi spout and mixer bowl.
- Connect milk hose onto combi spout.
- Reassemble and replace mixer bowl*.
- Close the green stud on the bayonet connector clockwise to close it.
- Close front panel.