

ESPRESSO CLEANING INSTRUCTIONS



PERFORM THIS AT LEAST
ONCE EVERY 24 HOURS



THIS CLEANING PROCEDURE
TAKES APPROX. 20 MINUTES




CHECK CORRECT TABLET IS
USED FOR EACH STAGE. USE
ONLY URNEX TABLETS.

STEP 1.

1.



2.



Gently tap bottom right of screen
Select the home button
Select the Care Options tab

STEP 2.

1.

Cleaning Brewing Groups

2.

Start Clean
No Yes

3.

Switch off after clean
No Yes

STEP 3.

Remove handle and fit blind baskets,
place 2gram tablet in basket and
insert handle back into machine.



Press Next ▶

STEP 4.

Cleaning Tablet Inserted



12-E18UX100-12

Press Next ▶



Attention: Hot water flows
from the hot water spout!

Press Next ▶

STEP 5.



Process will run for
17 MINUTES



Then

Remove handle
and blind filter

Press Next ▶

STEP 6.

Blind Sieve Removed?

Press Next ▶



Machine will perform flush

Press Next ▶

STEP 7.

Please clean portafilter and sieves
See user manual

Press Next ▶

Restart Machine



Machine will restart,
please wait

STEP 8.

Please insert empty portafilter
on left (right)

Press Next ▶

Remove handles



Machine will
perform flush

STEP 9.

Replace handles

Put the handles back
into the machine



ESPRESSO CLEANING INSTRUCTIONS

STEAM WAND CLEANING DAILY

STEP 1.

Clean machine with clean damp cloth



19-WIPZ12-100



12-MKTAB12-40

STEP 2.


- Add one Rinza tablet in a milk jug with 500ml of lukewarm water
- Completely immerse the nozzle in the cleaning solution
- For right steam wand briefly turn the steam tap
- For left steam wand briefly press auto-steam button

Soak time: 30 minutes

- Clean with a brush
- Rinse thoroughly with water
- Touch the foam button

The steam clears the holes of the steam nozzle of milk residue and removes cleaner residue.

Wipe the steam outlet with a damp cloth.

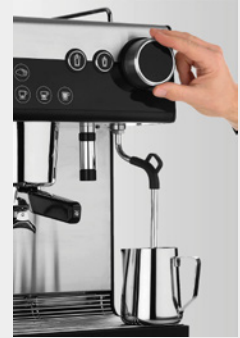

RIGHT



LEFT

CLEANING THE BREWING UNIT MANUALLY

STEP 1.

Use the brewing group brush to loosen the coffee grounds residue in the distributor filter and on the seal.



STEP 2.

Start the rinsing cycle for the distributor filter

- Remove the portafilter
- Press and hold the portafilter image on the display for more than 2 seconds
- Press again to confirm and continue

Rinsing starts.

